

## ExpressCube 165R

## Technical Specifications:

MODEL	EC 465D	
	EC-165R	
Physical Characteristics	Countertop design	
Dimensions: (Inches)	25.5 x 24 x 36	
, i.i.	[L <sub>×</sub> W <sub>×</sub> H]	
(Centimeters)	65 x 61 x 91.5	
	$[L_xW_xH]$	
Weight : (lbs)	36	
(kg)	16.3	
Operating Environment	14º to 104º F (-10º to 40º C) @ 0 - 90 % Humidity	
Imperial Measurements		
Max Dimensional Capacity (in)	23.8 x 19.6 x 30.8	
Max Dimensional Supusity (III)	[L x W x H]	
Resolution/Min Dimensional (in)	0.2 / 2.4	
Maximum Weight (lb)	155	
Weight Resolution (lb)	0.1	
TVOIGITE TOOCIATION (ID)		
Metric Measurements		
Max Dimensional Capacity (cm)	$60 \times 49.5 \times 78 \text{ [L}_{\times} \text{W}_{\times} \text{H]}$	
Resolution/Min Dimensional (cm)	0.5 / 6.0	
Maximum Weight (kg)	70	
Weight Resolution (kg)	0.05	
Features		
Printer Port (RS-232) 1	Standard	
Hand Scanner Port (RS-232) 2	Standard	
USB Computer Port 3	Standard	
Sizelt Software	Optional	
ExpressCube Controller	Optional	
ExpressCube Customer Display	Optional	






## Your cubing and dimensional weighing solution



Symbol	Function	Description
0 7 •	Power Switch	Switches ExpressCube ON / OFF
* (unmarked)	Calibration	*Authorized Personnel Only* Removal or damage to the calibration seal voids certification approvals
Ø	Power Adapter	The ExpressCube "universal" power adapter includes 4 power connections and has the following world safety approvals: UL/ULC, CE, PSE, BS, GS, FCC, SAA
<b>←</b>	USB	This USB port can be used by a local PC to operate and collect data from the ExpressCube™ unit.
III J	Hand Scanner	Connect to handheld scanner (not supplied). The port is a male RS-232 serial interface.
	Printer	RS-232 male port provides ASCII data output for either a printer or direct data logging onto a hard drive via a local PC application (not supplied).
	External Devices	These connectors are used to connect ExpressCube™ external devices such as the customer display or control box.

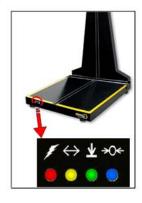

The front mounted LED indicators give an accurate status of the ExpressCube countertop's main computer and are unaffected by third party software.

- Red Power A steady illumination indicates that the unit has power.
   Yellow Valid Dimension A steady illumination indicates that the ExpressCube countertop has measured a parcel placed on the platform.
- Green Valid Weight 🛂 A steady illumination indicates that the ExpressCube countertop has weighed a parcel placed on the platform.
- Blue Zero >0< A steady illumination indicates that the ExpressCube countertop is in a zero (no-load) condition.