


4. Repair

4.1. Replacing the Sensor Lens


If a sensor lens becomes foggy (opaque) from wear, cracked or broken it should be replaced. All three lenses have a cover to permit safe and quick replacement of the lens. The covers are held on by two screws and there locations are illustrated below.



Sensor Lens Removal Points

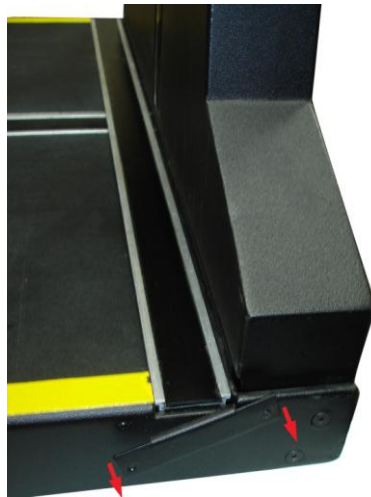

Lens cap removal

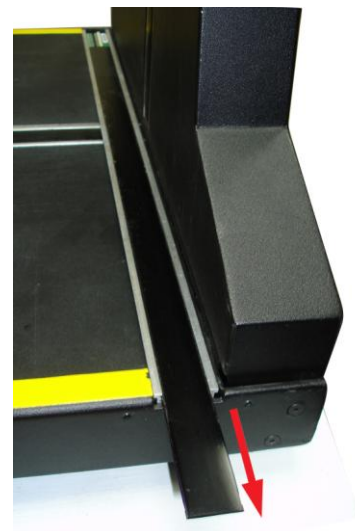

Lens Removal