



## Accessing Scale Size Menu

On the Controller, select '1' to access the main **Properties** menu.  
Next, select '1' - **Configuration** menu. Then, select '2' for '**System Size**'.  
An arrow appears beside the current scale model size.

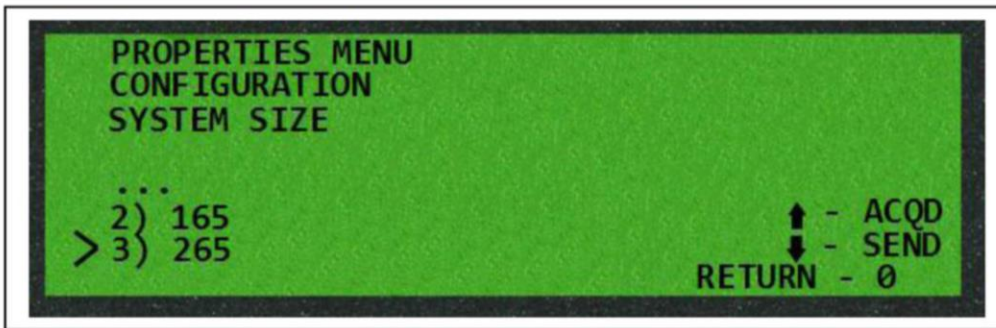

To scroll up or down

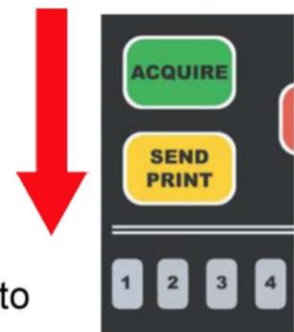

Use the Controller "Send Print" yellow button to scroll down to the desired size. The "Acquire" green button scrolls up.  
On the Controller, punch in the number next to the desired size to select a change.

**Note** - you must turn off the scale and power it back on to "lock in" the change.

The same procedure can be used to change the scale size again.